


Mobile view function user manual (windows)

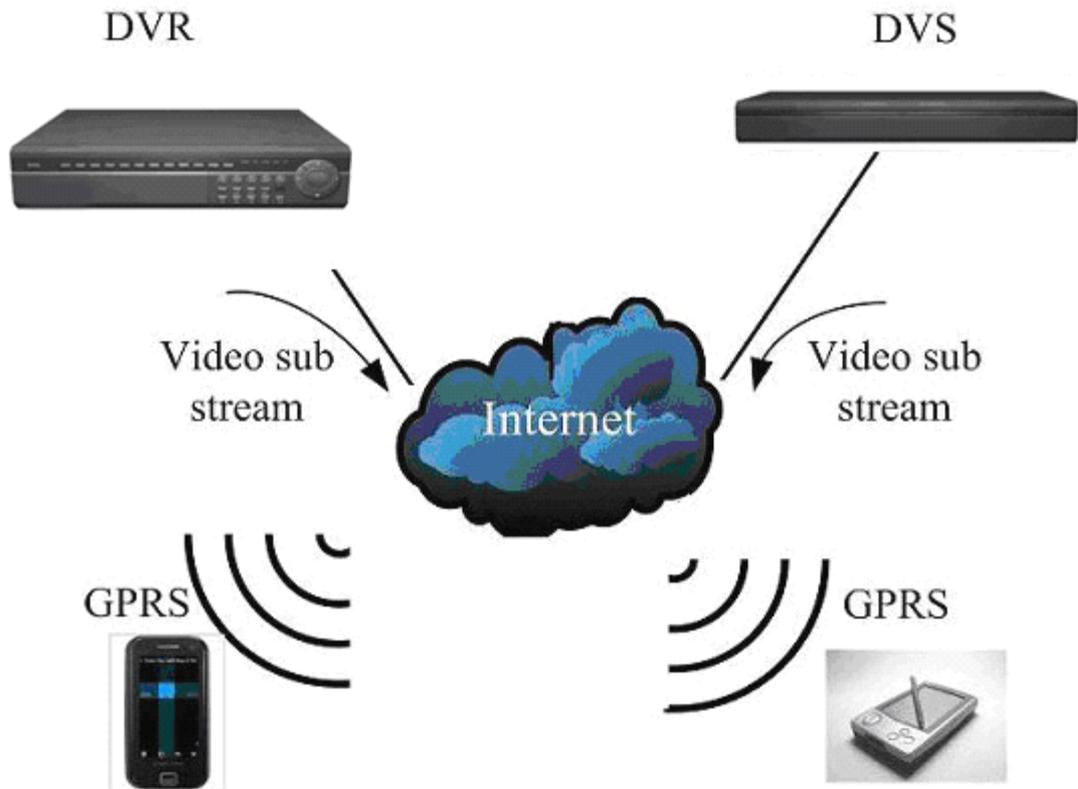

Recommended mobile phone list

Google Nexus One
HTC Diamond2
HTC HD Mini
HTC Touch HD
HTC Touch HD2
HTC Imagio
HTC Touch Pro2
HTC 6950 Diamond

Recommended use 3G or WIFI network, to obtain the better preview effect.

DVR configuration:

Notes:

1. Please make sure that your DVR has internet IP, and can be accessed via internet.
2. Please make sure that your DVR support mobile view function. (It depends on the DVR firmware version.)

Operation Steps:

7004/ 7008/ 7016:


Menu->Network->Platform Server Setting->Load to enter the mobile port setting interface



You need to set the listen port (command port) and choose the channels you want to view. (default listen port is 15966 ,range is 1-65535, you can change it by yourself ,all channels default disable),and you need do the listen port router mapping in your router. Please keep other box in this interface as the default status. Please click connect to save the setting.




Through the Main menu->record pare to enter the network stream setting interface. User need to reduce the network stream. We suggest that choose the bitrate to 100K of each channel ,and the frame rate is 8 fps of each channel. Remember save the setting.

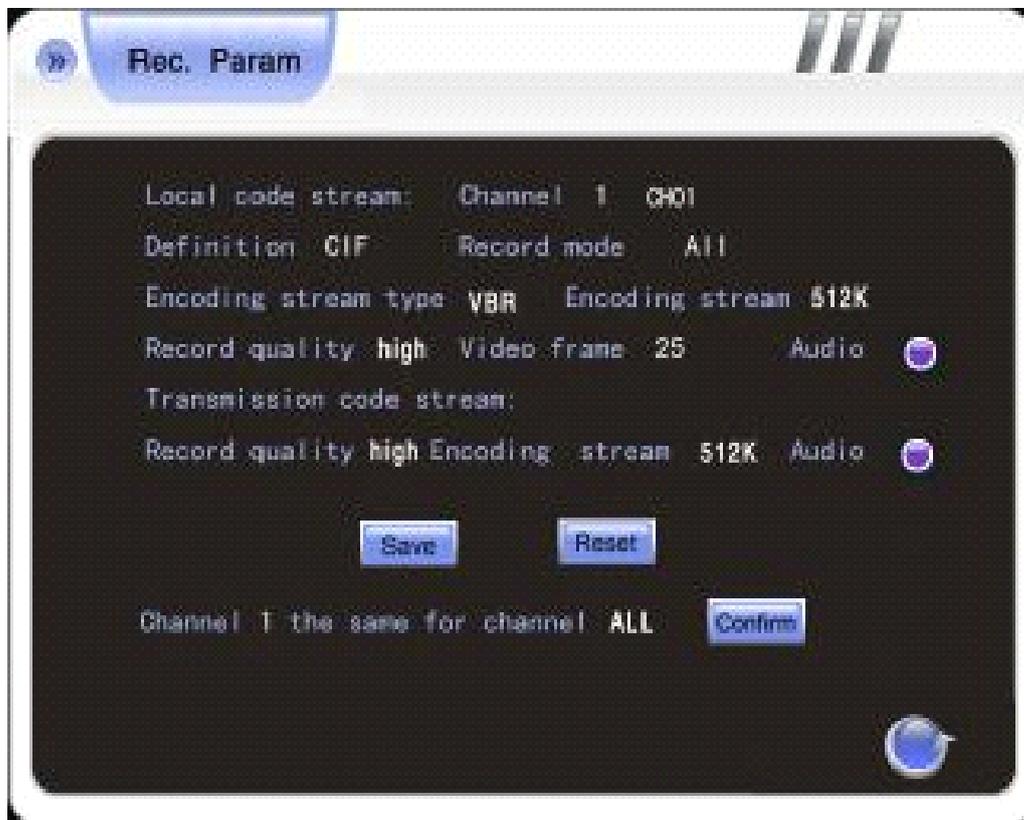


7000M/7000T2/7024/ 8000/ 8200:

Menu->Network->Server->Huake->Load to enter the mobile port setting interface

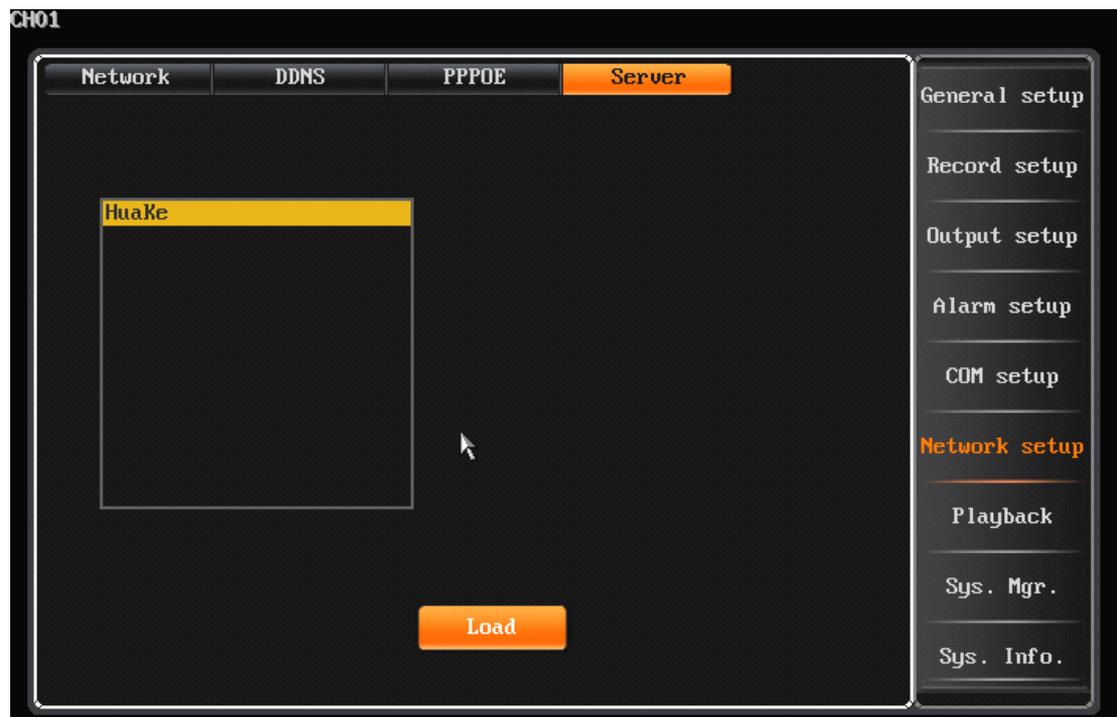


You need to set the listen port (command port) and choose the channels you want to view. (default listen port is 15966 ,range is 1-65535, you can change it by yourself ,all channels default disable),and you need do the listen port router mapping in your router. Please keep other box in this interface as the default status. Please click connect to save the setting.

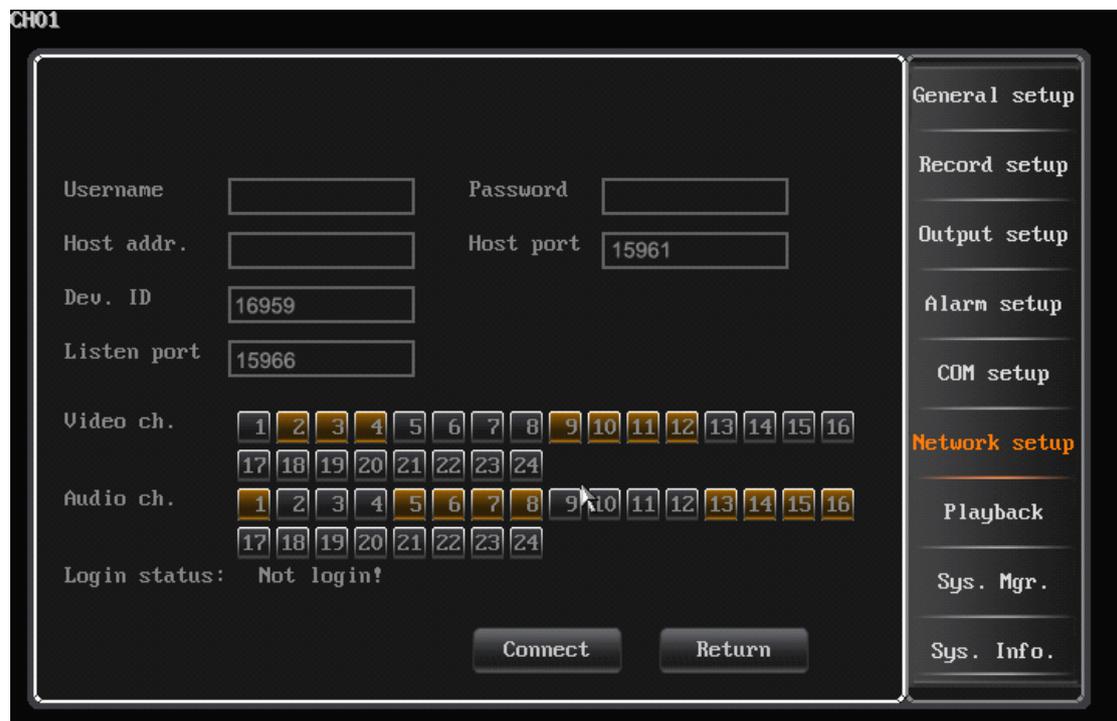

Through the Main menu->record setting-> record pare to enter the network stream setting


interface. User need to reduce the network stream. We suggest that choose the bitrate to 100K of each channel ,and the frame rate is 8 fps of each channel. Remember save the setting.

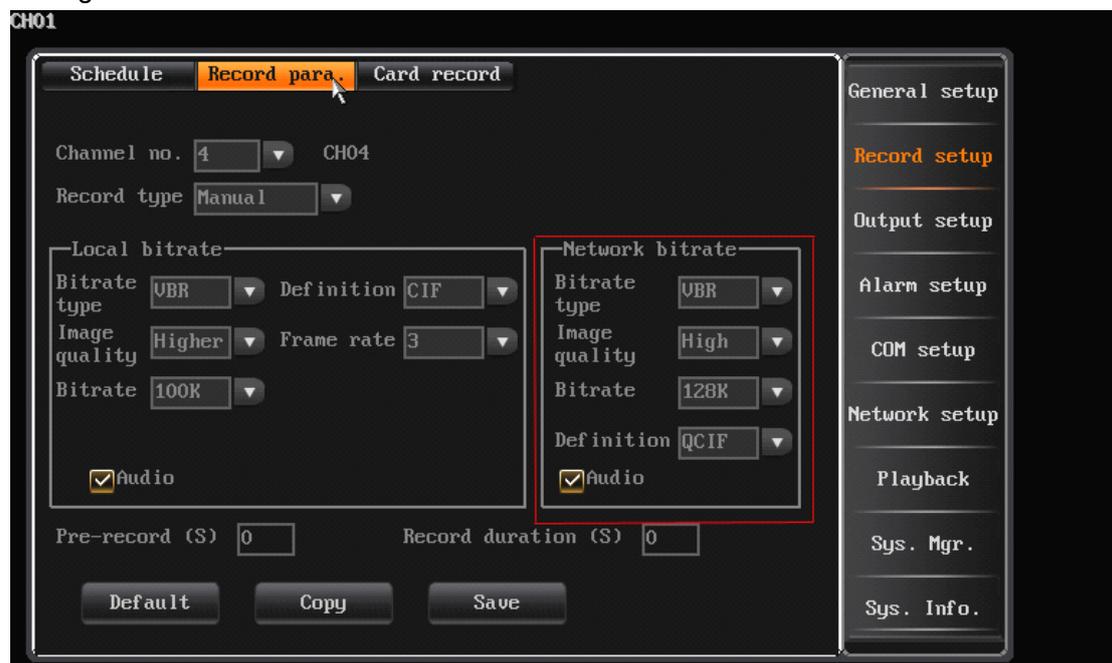

Router Configuration:

If the DVR connected to WAN through router, you need to do the command port (default 8101),http port (default 81),listen port(default 15966) router mapping .Take the TP-Link router as an example.

1. Do the port mapping in the router. Forward the listen port which your DVR set, default is **15966**.

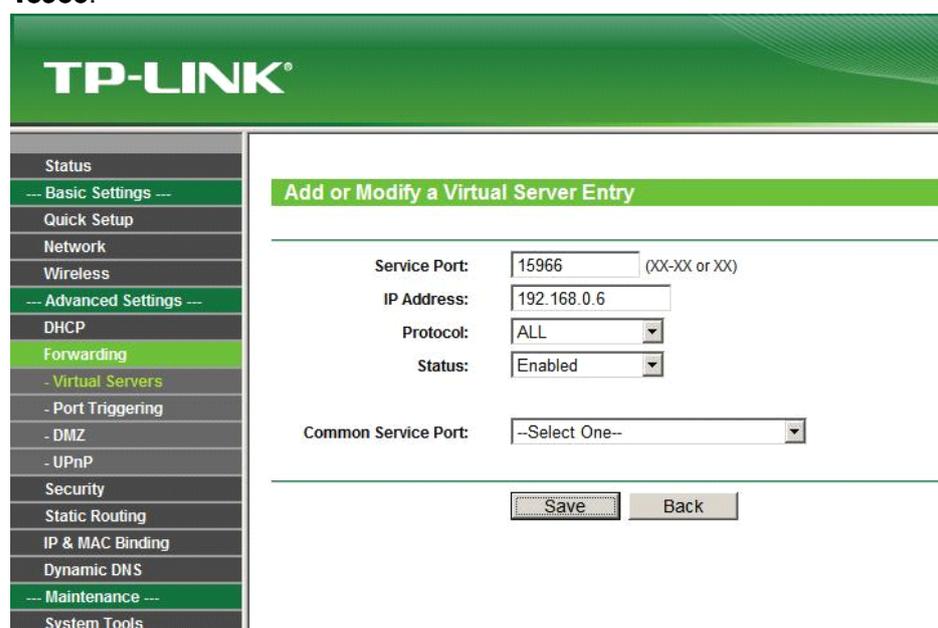

1. Do not forget forward other 2 ports which used on DVR internet setting.



TP-LINK®

- Status
- Basic Settings ---
- Quick Setup
- Network
- Wireless
- Advanced Settings ---
- DHCP
- Forwarding
- Virtual Servers
- Port Triggering
- DMZ
- UPnP
- Security
- Static Routing
- IP & MAC Binding
- Dynamic DNS
- Maintenance ---
- System Tools

Virtual Servers

ID	Service Ports	IP Address	Protocol	Status	Modify
1	15966	192.168.0.6	ALL	Enabled	Modify Delete
2	81	192.168.0.6	ALL	Enabled	Modify Delete
3	8101	192.168.0.6	ALL	Enabled	Modify Delete

Notes: if the DVR was connected to WAN through directly DDNS or PPPOE, you just need to do the listen port (default 15966) router mapping.


Mobile phone configuration

Take the HTC Diamond2 as an example:

The attachment CD of DVR has the windows mobile software. User can download it to mobile. After installation, it will appear on the screen as the red area:



Click this software and you will enter the interface as follows:

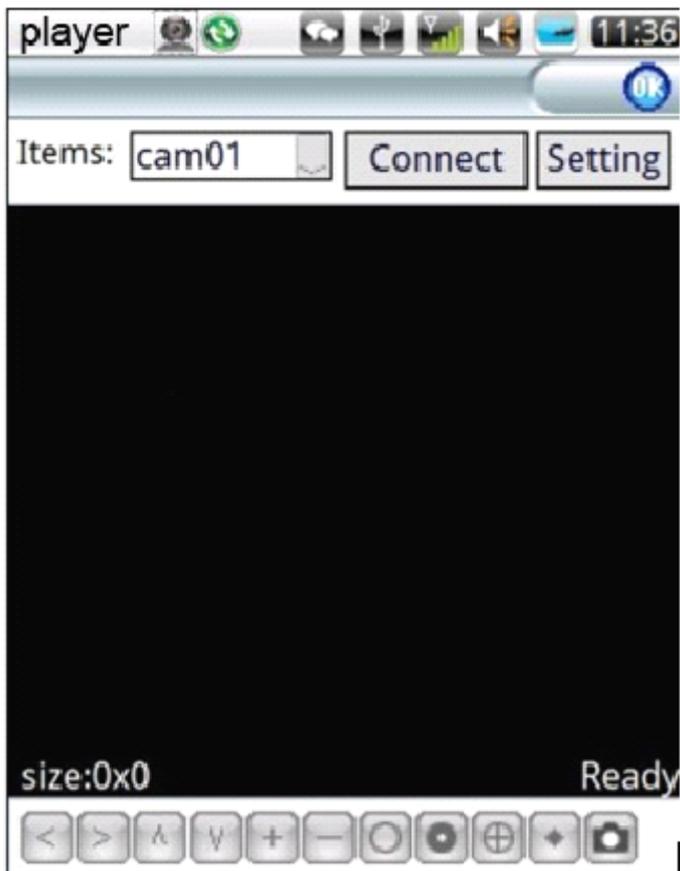

Click the “setting” button on the right top corner. You will enter the login interface as follows:



The screenshot shows a login window titled "player" with a system tray at the top containing icons for network, volume, and battery, and a clock showing 11:41. The form contains the following fields and controls:

- Username:
- Password:
- Server:
- Port:
- Notes:
- Buttons: "Ok" and "History"
- Checkboxes: "Auto Connect"
- Language selection: "中文" and "English"
- Version number: "v20100426-7" at the bottom left.

Notes: You should input the domain name of the mapping router, and the mobile command port (15966 for example) to the server box and port box. Password: default 888888, username: default admin.

Click “OK” to confirm the setting and it will return to the main display interface.

Click the connect button on the top bar. It will take several seconds to connect DVR. Then you will view the indicate “playing” in the lower right corner.



You can choose your target channel at the “Items” .



Function button: 1-4: Direction keys of PTZ control
5-6: Zoom+ and Zoom-
7-8: Focus+ and Focus-
9-10: Iris+ and Iris-
11: Snapshot

Notes: If the DVR you want to view has a fixed WAN IP, you can directly input that IP to the server port, and don't need to do the router mapping.

The image shows a screenshot of a software window titled "player". The window has a standard Windows-style title bar with several icons and a clock showing 11:38. Below the title bar, there are five input fields:

- Username:** A text box containing the word "admin".
- Password:** A text box containing seven asterisks "*****".
- Server:** A text box containing the IP address "183.15.240.8".
- Port:** A text box containing the number "15966".
- Notes:** An empty text box.

Below the input fields, there are two buttons: "Ok" and "History".

At the bottom of the window, there are two options:

- Auto Connect
- 中文
- English

In the bottom-left corner of the window, the text "v20100426-7" is displayed.